

OWNER'S MANUAL REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference.



MFL70370101

P/NO : MFL70370101
Rev.03_06032021

www.lg.com

Copyright © 2017-2021 LG Electronics. All rights reserved

 
CONTENTS

IMPORTANT SAFETY INFORMATION	3
INSTALLATION	12
INNER PARTS	13
OPERATIONS / FEATURES	14



Starting	
Before Setting the Temperature	
Self Test	
Controls For Freezer Compartment	
Controls For Refrigerator Compartment	
Vegetable Drawer (Optional)	
Humidity Controller	
Defrosting	
Deodorizer (Optional)	
Ice Making (Optional)	
Door Cooling+ (Optional)	
Door Alarm (Optional)	
Lamp Replacement	
Vacation Time	

SMART FUNCTIONS (Optional)	17
SUGGESTIONS ON FOOD STORAGE	19
CLEANING	20
GENERAL INFORMATION	21
IMPORTANT WARNINGS	22
BEFORE CALLING FOR SERVICE	23

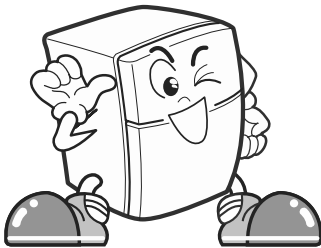

IMPORTANT SAFETY INFORMATION



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.



This is a safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injured or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



DANGER You will be hurt or seriously injured if you don't follow instructions.



WARNING To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.








CAUTION Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INFORMATION

WARNING

-  Keep ventilation openings, in the appliance enclosure or in the built-in-structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

IMPORTANT SAFETY INFORMATION

Risk of Fire and Flammable Materials



This symbol alerts you to flammable materials that can ignite and cause a fire if you do not take care.

 
- This appliance contains a small amount of isobutane refrigerant (R600a), but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m² in size for every 8 g of R600a refrigerant inside the appliance.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

IMPORTANT SAFETY INFORMATION

1. When connecting the power


Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

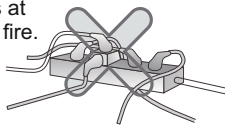

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

 Plug may get damaged, which causes fire or electric shock.

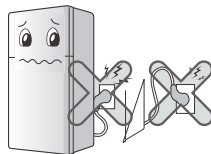

Do not allow the power cord to bend or pressed by heavy object.

It may damage the power cord and cause fire or electric shock.



Do not extend or modify the length of the power plug.

 
It damages the power cord and cause electric shock or fire.



1. When connecting the power


Unplug the power plug while cleaning, handling or replacing the interior LED lamp of the refrigerator.

- It may cause electric shock or injury.

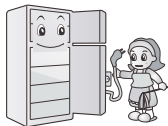

Do not pull out the cord or touch the power plug with wet hands.

 - It may cause electric shock or injury.

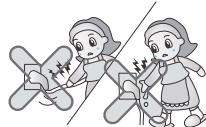


Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may cause fire or electric shock.



Make sure of grounding.

 Incorrect grounding may cause breakdown and electric shock.

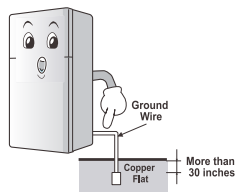


IMPORTANT SAFETY INFORMATION

1. When connecting the power

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

 - It may cause electric shock or short circuit.

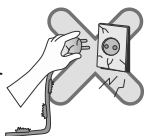

The tempered glass on door can be broken by impact, do not touch the broken parts you may injured.



2. When using the refrigerator

Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.

- It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.

- It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.



 
Do not install the refrigerator in wet place or place where water or rain splashes.

- Deterioration of insulation of electric parts may cause electric leakage.




Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

- It may cause explosion or fire.

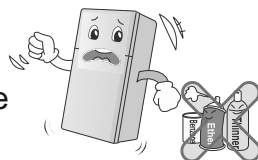


Do not use drier to dry the inside, nor light a candle to remove odor

 - It may cause explosion or fire.

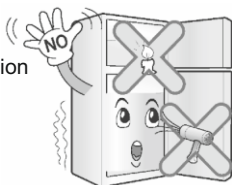

Do not store medicine or academic materials in the refrigerator.

 - When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

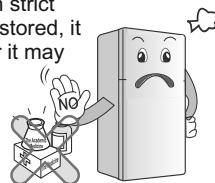


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not use the combustible spray near the refrigerator.

 - It may cause fire.

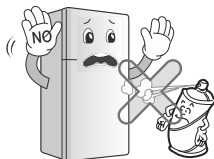


Install in places away from the fire such as the place where flammable gas is leaked.

 - It may cause fire.

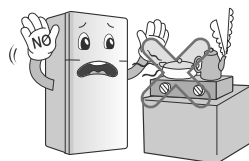


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

 - It may cause fire, electric shock or injury by dropping down.

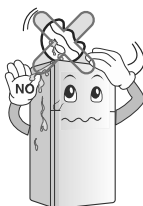

Use the submerged refrigerator only after checking it.

 - It may cause electric shock or fire.

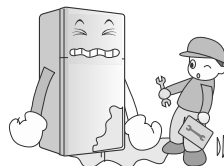


When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.

- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately.


This appliance uses a refrigerant gas (isobutane, R600a). Although it uses a small amount of the gas, it is still combustible gas.

 Gas leakage during appliance transport, installation or operation can cause fire, explosion or injury if sparks are caused

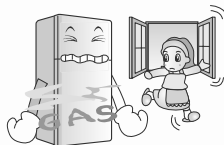


Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

 - Deterioration of insulation of electric parts may cause electric shock or fire

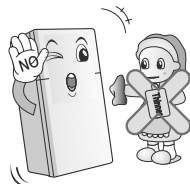

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

 - It may cause fire.

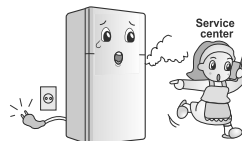


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

 - It may cause injury, electric shock or fire.

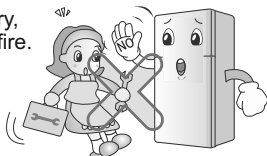

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

 - It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

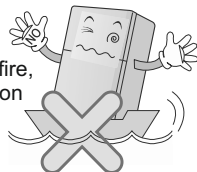


When disposing the refrigerator, remove the packing materials like gasket from the door.

- It may cause to lock out the child.




Install the refrigerator on a solid and level floor.

 - Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.

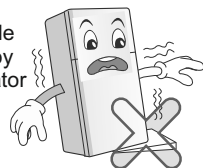

Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.

 - It may cause electric shock or injury.

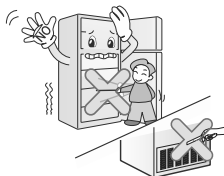

What to do with your old refrigerator?

- Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process.



In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.

 
- There is a danger of electric shock or fire.



Place all the components in the right places before connecting the power.



Never leave lit candles on the fridge, high risk of causing fire or product damage.

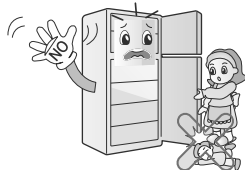


IMPORTANT SAFETY INFORMATION

⚠ CAUTION

Violating these directions may cause injury or damage to health, house or furniture. Always be careful, please.


Do not touch food or containers at the freezer with wet hands.

 - It may cause frostbite.

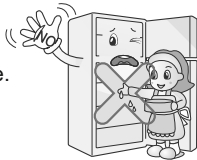

Wait for 5 minutes or longer when reconnecting the plug.

 - It may cause the operation of the freezer to fail.

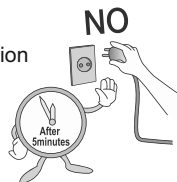

Do not put bottle in the freezer.

- Do not place glass containers, bottles or cans (especially those containing carbonated drinks) in the freezer compartment, shelves or ice bin that will be exposed to temperatures below freezing.



 
Pull out the power plug not by grasping the cord. But by the plug of its end.

- It may cause electric shock or short circuit to fire.



Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.

- Otherwise, your hands may be slipped to cause injury.

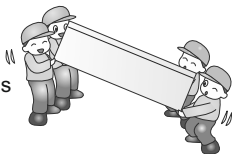


Do not insert hand into the bottom of the refrigerator.

- The iron plate of the bottom may cause injury.




 Completely empty inside before taking out the container from the door.

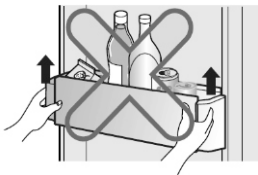

Opening or closing the door of the refrigerator may cause injury to the person around it, please be careful.

 - Opening or closing the door may cause feet or hands to be caught in the chink in door or child hand get hurt by the corner.

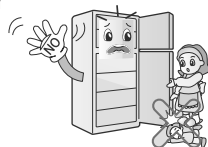


IMPORTANT SAFETY INFORMATION

Do not put any living animal in the refrigerator.



 Do not lean on the doors, Hinges may deregulate themselves causing air leak and performance deterioration

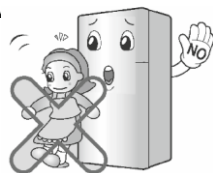

Movable parts like shelf, basket, etc. should be handled with care.

- May get damaged or break if dropped.

WARNING

- Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.
- If the appliance is equipped with a lock (some countries only), keep the key out of reach of children.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear for better performance and to aid in door closing.
Leveling screws can be turned easily by tipping the cabinet slightly.
Turn the leveling screws clockwise (➡) to raise the unit, counterclockwise (⬅) to lower it.
4. Don't install this appliance below 5°. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 6 hours .
Check the flow of cold air in the freezer compartment to ensure proper cooling.
Your refrigerator is now ready for use.
5. After installing the appliance, connect the power plug into a socket outlet. Before moving and discarding the appliance, disconnect the plug from the socket outlet.

Dimensions and Clearances

Too small of a distance from adjacent items may result in degradation of freezing capability and increased electricity costs. Allow over 50mm clearance from each adjacent wall when installing the appliance.

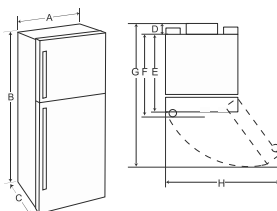 


Image for representation purpose only

	Bar Handle	Pocket Handle
A	585	585
B	1475	1475
C	703	669
D	55	55
E	614	614
F	648	614
G	1200	1200
H	991	991

Ambient Temperature

The appliance is designed to operate within a limited range of ambient temperatures, depending on the climate zone. do not use the appliance at a temperature exceeding the limit. The internal temperatures could be affected by the location of the appliance, the ambient temperature, the frequency of door opening and so on.

The climate class can be found on the rating label.


Climate Class	Ambient Temperature Range °C
SN (Extended Temperate)	+10 - +32
N (Temperate)	+16 - +32
ST (Subtropical)	+16 - +38
T (Tropical)	+16 - +43/+10 - +43*

*Australia, India, Kenya

NOTE

The appliances rated from SN to T are intended to be used at an ambient temperature between 10°C and 43°C.

 INNER PARTS

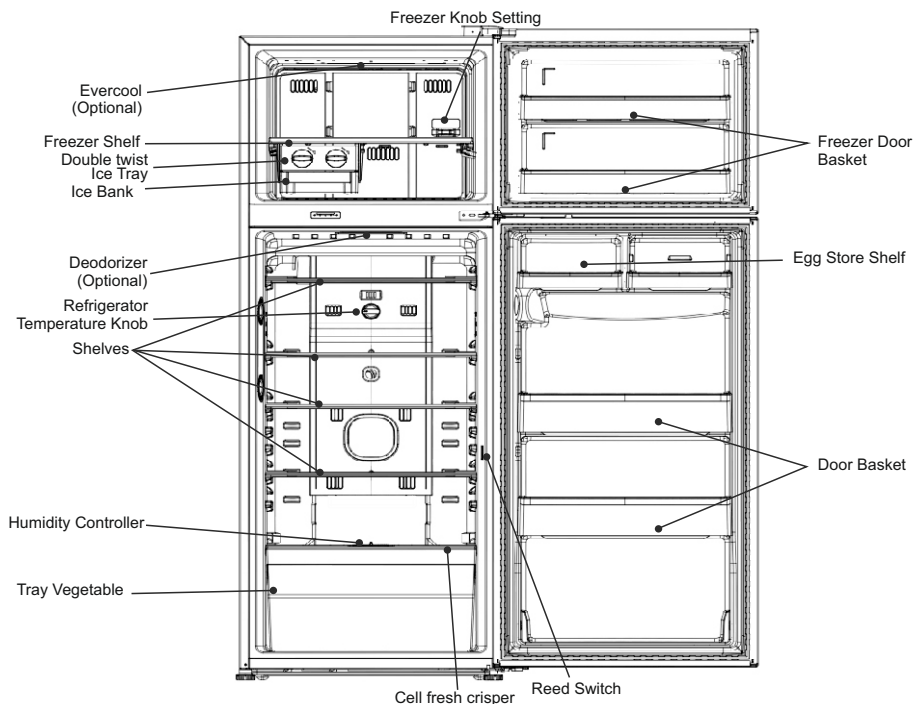

- Entire freezer compartment is 2 STAR. (☆☆)

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps refrigerator-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator-freezer, and cause temperature to rise.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice build up under normal operating conditions
- If gasket is damaged, efficiency may be lowered owing to the escape of cool air

* Please store this manual in a place where it can be easily accessed whenever required.

OPERATIONS / FEATURES

STARTING

When your refrigerator is firstly installed, allow 6 hours for the temperature to stabilize prior to filling it with fresh or frozen foods.

If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

 
- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control dial for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control dial for the refrigerator compartment is '4'.
- The default setting of the temperature control dial for freezer is '3'.
- This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

SELF TEST

- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.


CONTROLS FOR FREEZER COMPARTMENT

- The higher number on control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High (3 / • / ••).
- For achieving temperature in Freezing, Energy and Storage Test, Freezer control may be required to set at • or ••.

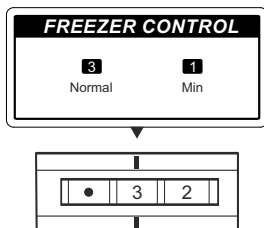

CONTROLS FOR REFRIGERATOR COMPARTMENT

 For colder temperatures, adjust the control knob to COLDEST, and for warmer temperatures, adjust the control knob to COLD position.

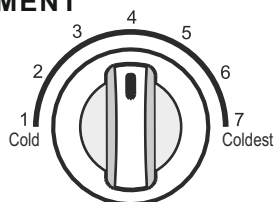


OPERATIONS / FEATURES

VEGETABLE DRAWER (OPTIONAL)


Cell Fresh Crisper

 It keeps your vegetables fresh by holding moisture & prevents them from getting rotten.

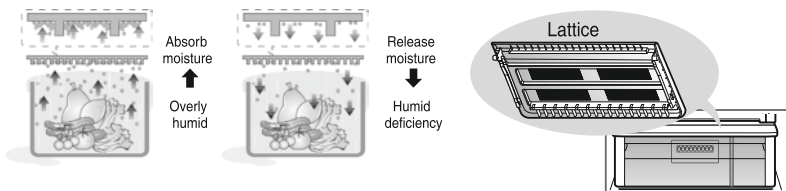

HUMIDITY CONTROLLER

 - Humidity Controller is for controlling the humidity inside the vegetable box.

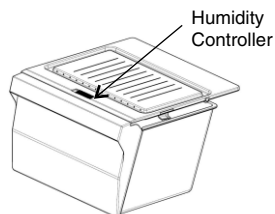


DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER (OPTIONAL)

 - Unpleasant odor of food in fresh food compartment is deodorized with no harm to the user and the food.

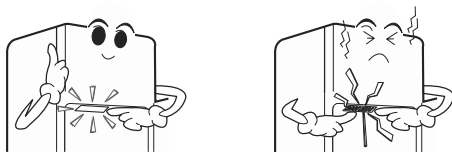


How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may get damaged.
- When storing food with strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.

Re-Using of Deodorizer

 - Used some length and the odor is strong, Deodorizer can be revived and re-used.
- Separate Deodorizer in ceiling of refrigerator compartment, using hair drier to remove moisture or malodor and oxidize under sunlight to decomposing malodor by ultraviolet.


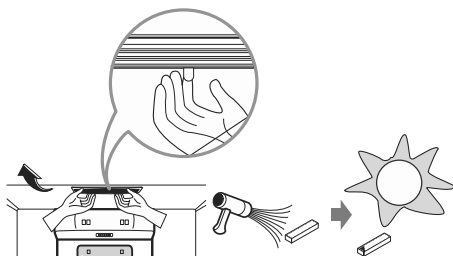


OPERATIONS / FEATURES

ICE MAKING (OPTIONAL)


Twisting Ice Serve Type

  - To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop into the ice cube box.
- You can remove the Twisting Ice Serve to make the freezer compartment larger.
- You should remove the ice Trays and Ice Cube Box first, and then pull the frame out toward the right side.
- Do not use anything other than water. Fill the water up to the marked line.

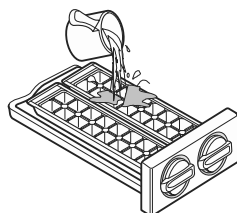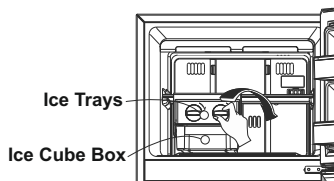

Door Cooling+ (Optional)

 - If water or foreign substances enter the cool air vent while cleaning, efficiency will be lowered.

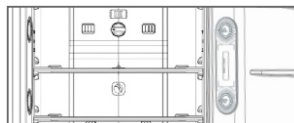

Door Alarm (Optional)

When the door of refrigerator is opened for 1 minute, an alarm will sound.



LAMP REPLACEMENT

NOTE : This product applies LED Lamp which cannot be replaced by the user. Please contact authorized service centre for the lamp replacement.



VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life.

If you are leaving the appliance turned off for an extended period of time, remove all food and unplug the power cord. Clean the interior, and leave the doors slightly ajar to prevent mould from growing in the appliance.

SMART FUNTIONS (Optional)

LG ThinQ Application

This feature is only available on models with the  or  logo

The LG ThinQ application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Smart Diagnosis

- If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

NOTE



- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Installing the LG ThinQ Application

Search for the LG ThinQ application from the Google Play Store or Apple App Store on a smart phone.

- Follow instructions to download and install the application.
- Run the LG ThinQ application and follow the instructions in the application to register the appliance.



Smart Diagnosis

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

 
- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance

Using Audible Diagnosis to Diagnose Issues

1. Open all the doors of the refrigerator. SDS can be input even in Test Mode & Error status.

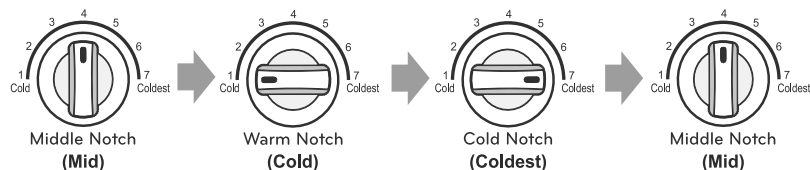

2. Turn knob to Middle notch.

3. Turn knob to Warm notch and keep that status for 2 sec.

4. Turn knob to Cold notch within 3 sec and keep that status for 2 sec.

5. Turn knob to Middle notch within 3 sec and keep that status for 2 sec.

6. Place the phone near the speaker hole in the top right side door hinge.

Ensure the microphone of the telephone is toward the speaker hole.

Do not take away the telephone while data is being transmitted.

During the data transmission for smart diagnosis, hold the telephone 10 cm away from the speaker hole and avoid any background noises.

SMART FUNTIONS (Optional)



CAUTION

The transmission sound may be irritating. Do not take away the telephone until the sound stops for good diagnosis.

7. When SDS is input, buzzer let you know by ringing 4 times.

(Frequency of SDS Buzzer is 2000 Hz, 0.2 sec Off / 0.2 sec On 4 times)

8. After inputting SDS, SDS buzzer will ring.

9. After the data transfer is complete, the diagnosis will be displayed in the application.


When the data transmission is completed, the refrigerator will be automatically turned Off and On a few seconds later.

SUGGESTIONS ON FOOD STORAGE

STORING FOOD

 
- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Freezer section marked  is -12C compartment/section, that is suitable for short term storage of frozen food(optional).
- In the event of a blackout, call the electricity company and ask how long it is going to last.
 - You should avoid door openings while the power is off.
 - When the power supply gets back to normal, check the condition of the food.

REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze by direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a upright position, which keeps them fresh for longer time.
- If there are chill compartments in the appliance, do not store vegetables and fruits with higher moisture content in the chill compartments as they may freeze due to the lower temperature.

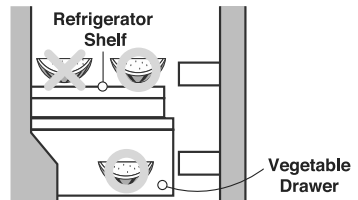

CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle. Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning
Not to use: Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used.
- Careless usage can lead to colour change.

GENERAL INFORMATION

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures.

During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw(s), turn them all the way into the base.

 
ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.

This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation
Pipe

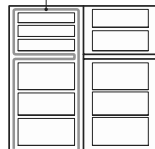

Caution

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE : Moving the control to OFF position does not remove power from the light circuit.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should be in such a position that the supply plug is accessible for quick disconnection when accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)

 
In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH.

It will cause electric shock or fire.

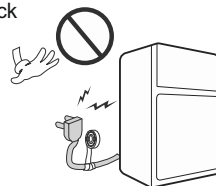

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

**This appliance must be grounded (earthed).
DON'T WAIT! DO IT NOW!**

Do not store Inflammable materials, explosives or chemicals In the refrigerator.

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST:

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	<ul style="list-style-type: none"> • Has a house fuse blown or circuit breaker tripped? • Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	<ul style="list-style-type: none"> • Temperature control not set on proper position. • Appliance is placed close to wall or heat source. • Warm weather-frequent door openings. • Door left open for a long time. • Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	<ul style="list-style-type: none"> • Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. • Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	<ul style="list-style-type: none"> • Foods with strong odors should be tightly covered or wrapped. • Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	<ul style="list-style-type: none"> • Not unusual during periods of high humidity. • Door may have been left ajar.

Symptoms	Possible Cause & Solution
There is no refrigeration or freezing.	Is there a power interruption? <ul style="list-style-type: none"> • Check the power of other appliances.
	Check the power of other appliances. <ul style="list-style-type: none"> • Plug the power plug in the outlet properly.
	A fuse in your home may be blown or the circuit breaker tripped. Or the appliance is connected to a GFCI (Ground Fault Circuit Interrupter) outlet, and the outlet's circuit breaker has tripped. <ul style="list-style-type: none"> • Check the main electrical box and replace the fuse or reset the circuit breaker. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. • Reset the circuit breaker on the GFCI. If the problem persists, contact an electrician.



MFL70370101