

# VON®

DESIGNED TO LOVE

## CERAMIC HEATER, 1500W

VHC153DYAK



## USER MANUAL

PLEASE READ CAREFULLY! BEFORE USING THE APPLIANCES  
PLEASE KEEP IT HANDY FOR FUTURE USE!

## **PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS**

*To ensure the best performance from your heater, please read and save the following instructions.*

- Avoid installation behind a door.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk (for Fan Heaters).
- Do not cover grilles, block entry or exhaust of airflow by placing appliance against any surface. Keep all objects at least 1 metre from the front and sides of the appliance. With exception of appliances designed for wall-mounting, maintain a 1 metre gap from the rear of the unit as well.

**WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR  
POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE  
MATERIALS**

- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- This appliance heats up when in use. To avoid burns, do not let bare skin touch hot surfaces. Switch off and use handles where provided when moving.
- Do not use the appliance to dry clothes.
- Do not leave the appliance unattended whilst in use.
- Do not insert or allow foreign objects enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not immerse in liquid or allow liquid to run into the interior of the appliance, as this could create an electrical shock hazard.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
- Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunction or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair before further use.
- Do not operate appliance with wet hands.
- This appliance is intended for household use only and not for commercial or industrial use.

- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- A common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum-cleaning air vents and grilles, where available.
- Do not use this appliance in a window as rain may cause electric shock.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains source until it has been installed in its final location and adjusted to the position it will be used in.
- This appliance is not intended for use in bathrooms, laundry or similar locations which may be exposed to water, moisture or humidity.
- Always operate on a flat horizontal surface.
- Switch off the appliance, then use handles (where provided) to change its position.
- Do not operate with the cord coiled up as this could cause a build up of heat, which could pose a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove the power plug from the socket by pulling the cord – grip the plug instead.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from areas where it is likely to be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that the cord has been fully removed from any cord storage area before use.
- Do not store appliance in a box or closed space until it has cooled down sufficiently.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance.
- The appliance must not be located immediately below a socket-outlet.

- Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- For additional protection, the use of a Residual Current Device (RCD) with a tripping current not exceeding 30mA is recommended.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped;
- Do not use if there are visible signs of damage to the heater;
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

## **CLEANING/ MAINTENANCE INSTRUCTIONS:**

### **During Season Care:**

- Before cleaning, be sure to turn off and unplug the heater.
- Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- Do not immerse the heater in water.
- Never use gasoline, benzene or thinner. This will damage the surface of the heater.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

### **After Season Care:**

- Store heater in a cool and dry location with power cord properly secured.
- Please store the unit in its original carton or suitable container.

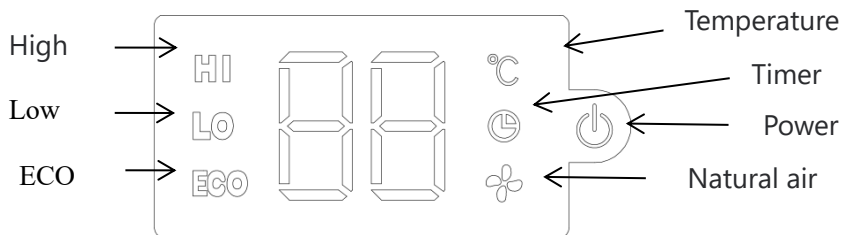
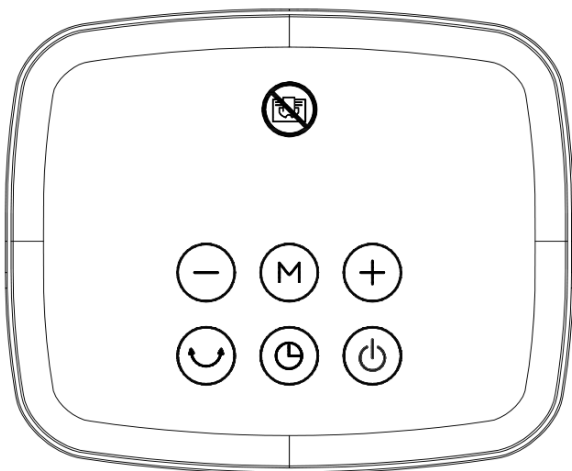
## **PRE—OPERATING INSTRUCTIONS:**

- Carefully remove your heater from the box (please save the carton for off-season storage)




- This product requires the use of 220-240V~ 50Hz, 8A current above the power socket, please confirm the use.
- Place heater on a firm level surface.

## OPERATING INSTRUCTIONS:

### CONTROL PANEL



Plug the appliance into an appropriate electrical outlet. Turn on the appliance by pressing the main power switch to position “I”. A beep sound will be heard and the power indicator will illuminate in the digital display. The appliance is in standby state.

1. Press “” and the heater starts to work. Press the button again, the appliance will continue to work for 30 seconds (with countdown in the digital display) to fully dissipate heat and then turn to standby state.
2. Press “” button enter into the mode selection, according to “high heat mode (HI light on) → low heat mode (LO light on) → ECO (ECO light on) → cold air mode ( light on) . when once press in high mode , second press in low mode. High or low heat can not set the temperature, but display the ambient temperature.

Press third it into ECO mode, then Press + OR - to set required temperature . The default setting temperature is 25°C , and the temperature setting range is 10-35°C. After setting the ECO mode, the ambient temperature is displayed three seconds later.

The set temperature is linked to the ambient temperature. If the product is set to "30 ° C", when the ambient temperature is equal to or less than "28 ° C", the product's high-grade power heating work, when the ambient temperature is between "28 ° C to 30 ° C", the product works at a low level, when the ambient temperature is equal to or greater than "30 ° C", the product stops heating and continues to blow. If you want to select high or low heating function only, you can press the "M" button to cancel the ECO mode.

1. TIMER: Press " ⏰ " button, the " ⏰ " light on, continuously to set your desired timer from 1-12h. To cancel the timer function, keep pressing the timer button until the digital display shows "00".

4.Swing : Press " 😊 " to activate swing function. Press it again to cancel.

5.In working state, press the " ⏻ " key , the heater will continue to work for 30 seconds (so that the heating body can fully dissipate heat) before entering the standby state.

6. If the heater is not in use for a long time, unplug the power plug. If the heater is restarted, the display will show the last working condition . ( product have no memory for timer function set. But it has memory for high/ Low. ECO. Cold wind and oscillation function.)

7. Screen off

Under high heat mode, low heat mode and ECO mode, the digital display (except for the power indicator and mode indicator) will extinguish automatically with no further operation in approx. 1 minute. Press any button again to recover.

## OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above. The appliance should operate normally. Should the problem persist, please contact the nearest customer service.

## TIP-OVER PROTECTION

This heater is protected with a safety switch that turns off the appliance automatically when the heater falls over, or is at an excessive angle from the horizontal. This helps prevent accidents, and the heater will back to the standby mode when it is put back upright, press the buttons on control panel or remote control to reset the heater

## SPECIFICATIONS

Power Supply: AC220-240V ~ 50Hz

Model: KPT-150 0596L

Power Consumption: 1500W



Class II

## Environment

Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



## Information requirement for the electric local space heaters

Model identifier(s): KPT-150 0596L

Item	Symbol	Value	Unit	Item	Unit
				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
<b>Heat output</b>					
Nominal heat output	P <sub>nom</sub>	1,5	kW	manual heat charge control, with integrated thermostat	NO
Minimum heat output (indicative)	P <sub>min</sub>	1,0	kW	manual heat charge control with room and/or outdoor temperature feedback	NO
Maximum continuous heat output	P <sub>max,c</sub>	1,5	kW	electronic heat charge control with room and/or outdoor temperature feedback	NO
<b>Auxiliary electricity consumption</b>				Fan assisted heat output	NO
At nominal heat output	el <sub>max</sub>	<b>0</b>	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	el <sub>min</sub>	<b>0</b>	kW	single stage heat output and no room temperature control	[NO]
In standby mode	els <sub>b</sub>	<b>0,32</b>	W	Two or more manual stages, no room temperature control	[NO]
				with mechanic thermostat room temperature control	[NO]

				with electronic room temperature control	[YES]
				electronic room temperature control plus day timer	[NO]
				electronic room temperature control plus week timer	[NO]
				<b>Other control options (multiple selections possible)</b>	
				room temperature control, with presence detection	[NO]
				room temperature control, with open window detection	[NO]
				with distance control option	[NO]
				with adaptive start control	[NO]
				with working time limitation	[YES]
				with black bulb sensor	[NO]
Contact details	<p><b>Pls fill the customer's company name and address</b>  <b>填客户的公司名和地址信息</b></p>				



# Hotpoint

## HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway  
Exit 10-next to Kenyatta University  
P.O Box 402-00606, Nairobi, Kenya  
TEL: +254-20-3699000  
info@hotpoint.co.ke

## OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara  
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

## SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

# VON<sup>®</sup>

DESIGNED TO LOVE

## Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von\\_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

# VON HOME APPLIANCES WARRANTY

**VON provides a 12 months warranty for this product from the date of purchase.**

## **TERMS & CONDITIONS:**

<p><b>1</b> The warranty is valid for 12 months from the date of purchase.</p> <p><b>2</b> This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p><b>3</b> Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p><b>4</b> All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightening /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p><b>5</b> This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p><b>6A</b> This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p><b>6B</b> This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p><b>6C</b> This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p>	<p><b>7</b> Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p><b>8</b> This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p><b>9</b> No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p><b>10</b> In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p><b>11</b> Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p><b>12</b> Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p><b>13</b> The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p><b>14</b> This warranty shall be subject to the Laws of Kenya.</p>
---	--

**YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.**

**PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.**

**THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY**



DESIGNED TO LOVE

WARRANTY CARD

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....

.....

ADDRESS:.....

.....

TEL/MOBILE NO. ....EMAIL ID.....

P.O. BOX: .....

DATE OF PURCHASE: ...../...../.....

DEALER'S NAME, BRANCH & ADDRESS: .....

.....

INVOICE NO.....

DEALERS STAMP:

Model No. VHC153DYAK