

VON®

DESIGNED TO LOVE

FAN HEATER, 1500W

VHF152MLK



USER MANUAL

PLEASE READ CAREFULLY! BEFORE USING THE APPLIANCES
PLEASE KEEP IT HANDY FOR FUTURE USE!

Operating instructions for model number: (VHF152MLK) - PTC-156



Thank you for buying this ceramic fan heater. Please read these instructions carefully and keep them in a safe place for future reference.

When switched on for the first time a slight odor might be emitted for a few minutes. This is harmless and occurs with most heaters when any slight traces of dust or lubricants that may have collected in the factory are heated away.

PRECAUTIONS:

- PLEASE do not place this heater where children, the infirm or pets can reach it.
- The front grid gets very hot when in use, so treat this heater as you would an electric bar fire.
- Do not cover the heater when in use and make sure that there is at least 12 inches of clearance behind it so that the air intakes are not obstructed.
- Never use the heater near a bath, shower or swimming pool.
- Ensure that no object of any kind is within two meters of the heater when it is use.
- Never use the heater near any inflammable material. It must not be put near or in contact with any FUEL, OIL, GAS or EXPLOSIVES.
- Do not use it outdoors.
- Do not position it directly below a power socket.
- Always position it on a flat horizontal surface.
- NEVER move or pick up the heater when it is turned on.
- Do not use the heater with a programmer or timing device that switches it on automatically. The use of such devices is dangerous and can cause a fire risk.

SYMBOL FUNCTION

	OFF
	Fan only, no heat
"I"	Low heat output
"II"	Full heat output

 

THERMOSTAT:

Turn clockwise to increase the heat output.

OPERATION:

- Plug the heater into a suitable power outlet [observing all the instruction regarding positioning and switch on.

To use the fan only function:

- Turn the control dial to . The fan will blow out air at room temperature.
- If the fan does not operate, the ambient room temperature is cooler than the built-in thermostat  level. Turn the thermostat dial gradually clockwise and the fan will start blowing.
- As soon as the fan starts, the light in the front of the machine will illuminate.

To use the machine for heating:

- Turn the control dial to “I” for low heat and “II” for full heat.
- Set the level of heat by turning the thermostat dial gradually clockwise for the lowest heat and fully clockwise for maximum.
- The thermostat will turn the machine off when the selected room heating is achieved, and when the temperature drops it will turn on again automatically.
- For maximum heat output use “II” with the thermostat turned fully clockwise.

OVERHEATING:

- The thermostat will turn the machine off if it overheats.
- Overheating can be caused by obstruction to the air intakes on the back of the machine or the grill on the front. If this occurs please disconnect the machine and allow it to cool for 30 minutes. Remove any obstruction and turn the machine back on.

CLEANING AND CARE:

- There are no parts inside the machine that require your attention or servicing. Do not try to open the outer case. By doing so you could damage the motor and heating element and invalidate the warranty. If you have a problem with the heater, or if the power cord gets damaged in any way, you MUST take the unit to a suitably qualified engineer or electrical repair centre.
- Before cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never clean the machine with water and do not let it get wet under any circumstance.
- The outside case can be cleaned using a slightly damp lint-free cloth [a small amount of detergent can be used if required].
- To remove any dust particles etc. from inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the machine is completely dry before using.
- If you are not going to use the heater for a while it is best to make sure it is clean and dry and then store it inside a plastic bag in a cool dry place.
- With sensible care and attention this heater will give you many years of good service and economical heating.

Hotpoint

HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway
Exit 10-next to Kenyatta University
P.O Box 402-00606, Nairobi, Kenya
TEL: +254-20-3699000
info@hotpoint.co.ke

OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruiru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

VON[®]

DESIGNED TO LOVE

Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

VON HOME APPLIANCES WARRANTY

VON provides a 12 months warranty for this product from the date of purchase.

TERMS & CONDITIONS:

<p>1 The warranty is valid for 12 months from the date of purchase.</p> <p>2 This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p>3 Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p>4 All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightening /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p>5 This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p>6A This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p>6B This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p>6C This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p>	<p>7 Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p>8 This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p>9 No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p>10 In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p>11 Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p>12 Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p>13 The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p>14 This warranty shall be subject to the Laws of Kenya.</p>
---	--

YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.

PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.

THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY



DESIGNED TO LOVE

WARRANTY CARD

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....

.....

ADDRESS:.....

.....

TEL/MOBILE NO.EMAIL ID.....

P.O. BOX:

DATE OF PURCHASE:/...../.....

DEALER'S NAME, BRANCH & ADDRESS:

.....

INVOICE NO.....

DEALERS STAMP:

Model No. VHF152MLK