

VON®

DESIGNED TO LOVE

FAN HEATER, 2000W

VHF202MLK



USER MANUAL

PLEASE READ CAREFULLY! BEFORE USING THE APPLIANCES
PLEASE KEEP IT HANDY FOR FUTURE USE!

FOR YOUR OWN SAFETY

1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. Do not leave your home while the appliance is in function. Ensure that the switch is in OFF ("O") position and the thermostat is in minimum position. Always unplug the appliance.
4. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. At least 100cm away from the fan heater.
5. If wall mounted do not fix to combustible material such as wooden, synthetic or plastic surfaces. Do not hang anything on or in front of the fan heater.
6. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
7. Keep the air inlet and outlet free from objects, at least 100cm in front and 50cm behind the heater.
8. Do not install the heater right below a socket.
9. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 175F).
10. **Do not cover.** If covered, there is the risk of overheating.
11. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
12. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
13. If the cord of this appliance is damaged discontinues use of this product and contact the manufacturer for further instructions.
14. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.

INSTALLATION

The appliance requires no installation; it should be used solely as a portable appliance.

Portable appliances are not suitable for use in a bathroom.

OPERATION

-Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.

-Summer service (ventilation only): turn the knob to setting ' '.*

-Heating at reduced power: turn the knob(right)to setting'●' (1000W) .

-Heating at full power: turn the (right) to setting'●●'(2000W)

-Switching off: turn the knob (left) to setting 'O'

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the right thermostat knob(where included)in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.

Clean the air inlet/outlet grilles frequently.

Never use abrasive powders or solvents.

WARNINGS

- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grills (danger of overheating).
- The heater must be positioned at least 50cm from furniture or other objects.
- When the appliance must be installed so that the switches and other controls cannot be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted only a technician authorized by the manufacturer, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4m² areas.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating(e.g. obstruction of air intake and outlet grills, motor turning slowly or not at all).To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

Hotpoint

HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway
Exit 10-next to Kenyatta University
P.O Box 402-00606, Nairobi, Kenya
TEL: +254-20-3699000
info@hotpoint.co.ke

OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruiru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

VON[®]

DESIGNED TO LOVE

Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

VON HOME APPLIANCES WARRANTY

VON provides a 12 months warranty for this product from the date of purchase.

TERMS & CONDITIONS:

<p>1 The warranty is valid for 12 months from the date of purchase.</p> <p>2 This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p>3 Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p>4 All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightning /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p>5 This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p>6A This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p>6B This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p>6C This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p>	<p>7 Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p>8 This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p>9 No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p>10 In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p>11 Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p>12 Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p>13 The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p>14 This warranty shall be subject to the Laws of Kenya.</p>
--	--

YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.

PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.

THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY



DESIGNED TO LOVE

WARRANTY CARD

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....

.....

ADDRESS:.....

.....

TEL/MOBILE NO.EMAIL ID.....

P.O. BOX:

DATE OF PURCHASE:/...../.....

DEALER'S NAME, BRANCH & ADDRESS:

.....

INVOICE NO.....

DEALERS STAMP:

A large, rounded rectangular box with a thin black border, intended for a dealer's stamp.

Model No. VHF202MLK