

VON[®]

DESIGNED TO LOVE

CERAMIC HEATER, 2200W

VHT223DYAK



USER MANUAL

PLEASE READ CAREFULLY! BEFORE USING THE APPLIANCES
PLEASE KEEP IT HANDY FOR FUTURE USE!

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



- WARNING: In order to avoid overheating, do not cover the heater.

- The heater must not be located immediately below a socket-outlet.

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

In order to prevent the risks of a fire, an electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.

Please read the following information carefully before using the appliance for the first time for your own safety and to ensure correct use.

SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:


1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
8. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
9. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.
10. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
11. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.

12. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
13. Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
14. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
15. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
16. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
17. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
18. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
19. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
20. Do not use the appliance for other than its intended use.
21. Do not use outdoors. FOR INDOOR USE ONLY.
22. Do not leave the appliance unattended when switched on.
23. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
24. Do not locate the heater immediately below a socket-outlet.
25. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
26. This product is intended for normal domestic/household use only. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.
27. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
28. Do not use this heater if it has been dropped;
29. Do not use if there are visible signs of damage to the heater;
30. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.


WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

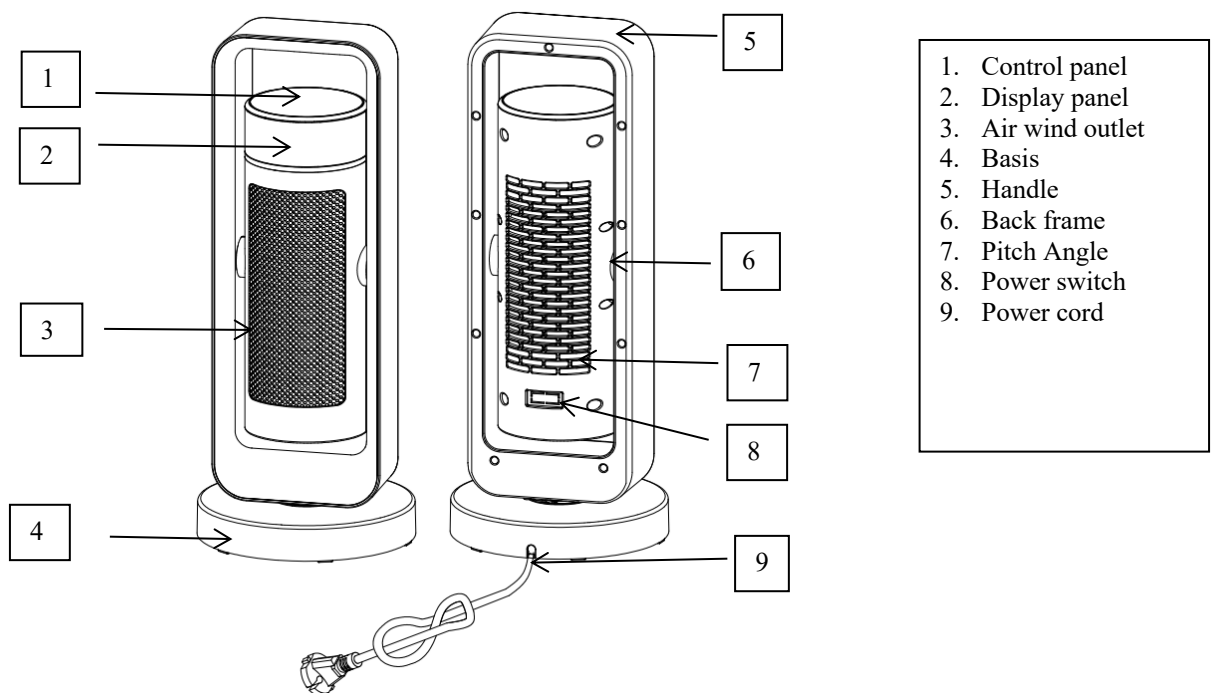

STRUCTURE







USING THE HEATER


1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label of the unit.

2. When plugged in, turn on the Main power switch  at the back of the unit.

3. When in Standby mode, only press  on the control panel will respond to your touch, and the LED display shows the room temperature. Press  to access the rest of the control panel.


(a) Low Power: (Press  to switch it, one  light on)


(b) High Power: (Press  to switch it, two   light on together)


(c) TIMER: Press this button  repeatedly to set a period after which the heater will turn itself off (From 0 hour -12 hours)

(d) + , - : adjust room temperature .Temperature setting from 10-35°C. Press “+” to increase the desired temperature and “-” to decrease the desired temperature. When

the room temperature lower 4 °C than the settled temperature of unit, it's high power working, lower 2°C, lower power working, if room temperature reach the setting temperature, the heating stop, fan is permanently on till room temperature lower than the setting temperature 2°C, the unit automatically return to lower power heating, if room temperature lower 4 °C , higher power heating, it's automatically return to heating.

(e) Swing : Press  to activate swing. Press it again to cancel.

(f) Press  to turn off the heater, the unit will keep working 30 seconds of cool air after turn off it . this design can protect item use longer.

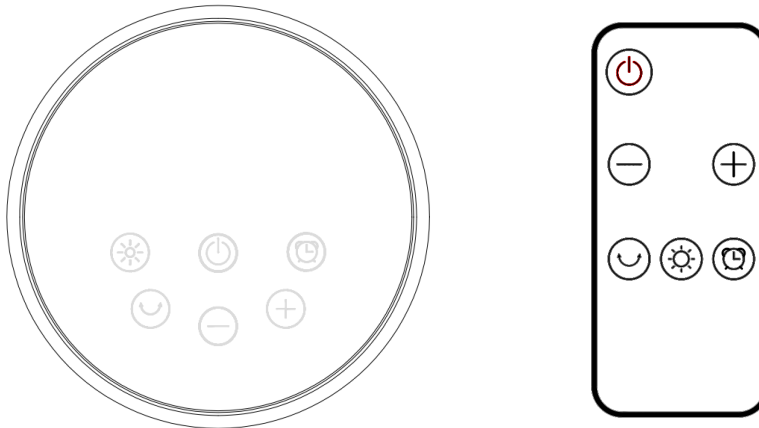

Warning:

1. Before removing the plug from the socket, switching off and better work for 30-60 second for cool down in condition that protecting inner parts.
2. Remote control Install lithium battery, battery model No. CR2025

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat,e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as deccribed above. The appliance should operate normally. Should the problem persist, please contact the nearest customer service.

NOTE: To assist in maintaining the internal components, after pressing the OFF button the fan will continue to blow room air for a period of 30-60 seconds before shutting down to standby.

SAFETY SYSTEM

- In the event of abnormal overheating, a safety device shuts down the appliance automatically. After a short cooling down phase, the appliance is ready for use again.
- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to over heat, and the safety device to operate.
- The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

MAINTENANCE

- Your appliance must be switch OFF via the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

SPECIFICATIONS

Model No	KPT-2000 5178L
Voltage	220-240V~
Frequency	50Hz
Output Power (W)	2200W



When the time comes to eliminate this product, please consider the environmental impact and take it to recognized recycling facility instead of disposing it with general household waste. Take the equipment to a waste disposal site. Plastic and metal parts that are used in the construction of this appliance can be separated into pure grade which allow recycling. Ask to your service center for details. Everyone of us can participate on the environmental protection.

Hotpoint

HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway
Exit 10-next to Kenyatta University
P.O Box 402-00606, Nairobi, Kenya
TEL: +254-20-3699000
info@hotpoint.co.ke

OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruiru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

VON[®]

DESIGNED TO LOVE

Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

VON HOME APPLIANCES WARRANTY

VON provides a 12 months warranty for this product from the date of purchase.

TERMS & CONDITIONS:

<p>1 The warranty is valid for 12 months from the date of purchase.</p> <p>2 This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p>3 Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p>4 All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightning /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p>5 This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p>6A This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p>6B This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p>6C This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p>	<p>7 Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p>8 This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p>9 No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p>10 In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p>11 Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p>12 Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p>13 The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p>14 This warranty shall be subject to the Laws of Kenya.</p>
--	--

YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.

PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.

THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY



DESIGNED TO LOVE

WARRANTY CARD

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....

.....

ADDRESS:.....

.....

TEL/MOBILE NO.EMAIL ID.....

P.O. BOX:

DATE OF PURCHASE:/...../.....

DEALER'S NAME, BRANCH & ADDRESS:

.....

INVOICE NO.....

DEALERS STAMP:

Model No.VHT223DYAK