

VON®

DESIGNED TO LOVE

OIL RADIATOR HEATER

VSHC2090K



USER MANUAL

PLEASE READ CAREFULLY! BEFORE USING THE APPLIANCES
PLEASE KEEP IT HANDY FOR FUTURE USE!

IMPORTANT!! PLEASE READ FIRST

- ❑ This appliance should not be used by persons with physical, sensory or mental disabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety.
- ❑ Verify the voltage in your home corresponds to the rated voltage of this appliance.
- ❑ To avoid the risk of electrical shock, do not immerse the cord, plug, base, and plug top in water or any other liquid.
- ❑ Caution should be taken when the appliance is used in the presence of a child.
- ❑ Unplug the cord from the power outlet when the appliance is not in use or while cleaning.
- ❑ Do not use this appliance when it is malfunctioning or has been dropped or damaged in any manner. Please contact the Authorised Distributor or Service Point.
- ❑ The use of attachments not recommended by the manufacturer may damage the appliance or cause a risk of injury to people around.
- ❑ Do not use this appliance outdoors. This appliance is not suitable for use other than home requirement. Caution should be taken to protect the fan from direct sunlight, moisture, sharp edges, and heat. Do not touch the fan/plug with wet hands. If the kettle or cord becomes wet switch the mains off and then remove the plug from the power point. Caution should be taken if the fan is placed near the window on a rainy day.
- ❑ Do not let the cord hang over the edge of a table or counter or come in contact of hot surfaces of any other gas/electrical appliances to avoid damage.
- ❑ Do not use a broken, chipped or cracked unit to avoid injury and electric shock.
- ❑ Always place the fan on a stable, flat and firm surface.
- ❑ If the power cord is damaged, it needs to be replaced at the authorised service provider to avoid hazard.
- ❑ Never insert any object in the heater through the grills or other wise to avoid accidents.
- ❑ Unplug the fan while moving it from one place to another.


Continued

THIS UNIT IS FOR HOUSEHOLD USE ONLY.

PRODUCT CHARACTERISTICS

- Our electro thermal heater operates as follows: tubular element is taken as heat source, efficient and permanent heat conduction oil is taken as the medium, heat eliminates via radiation fin, and room temperature is increased via air circulation.
- Our electro thermal heater has the following advantages: convenient, safe, beautiful, tranquil operation, without electromagnetic disturbance etc. It is suitable for such locations as scientific research room, hospital, hotel, training practice house, and bedroom, etc. The heater keeps your room or office more comfortable in cold seasons!

KNOW YOUR HEATERS

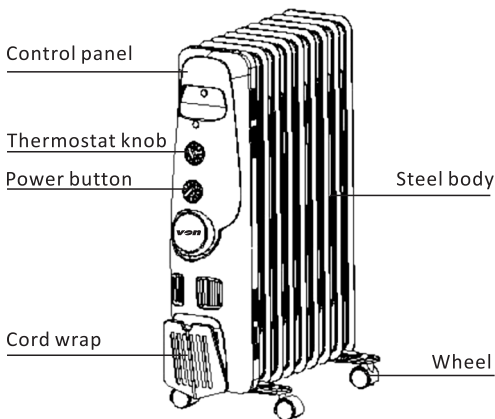

1. Control panel
2. Thermostat knob
3. Power button
4. Cord wrap
5. Wheel
6. Steel body

Continued

INSTALLATION

- ❑ The appliance requires no installation; it should be used solely as a portable appliance.
- ❑ Portable appliances are not suitable for use in a bathroom.

OPERATION

Mounting:

Take out the heater and all the parts from packing carton.

- ❑ Let the heater be upside down.
- ❑ Place the footplate on the top of both radiation fins
- ❑ Secure the footplate on the heater with specified U type bolt and wing nut
- ❑ Tighten the nut in the bolt and fix the castors.
- ❑ Place the heater upright on the castors.

Placing:

The heater should be away from the wall or other objects such as furniture and curtains at least 90cm; do ensure that the power supply corresponds to that on the nameplate; the temperature controller switch and power switch are at “OFF” position; plug in the attaching plug.

1. The temperature controller can regulate room temperature. Turn the temperature controller clockwise to increase the temperature; turn it anti-clockwise to reduce the temperature until appropriate temperature is reached.
2. Power switch is a pressed switch:
 - a> With power switch I pressed, the indicator “ON” indicates Level I power.
 - b> With power switch II pressed, the indicator “ON” indicates Level II power.
 - c> With power switch I and II pressed, the indicator “ON” indicates Level III power.

When the heater is not in use for a long time, the power switch should be at “0” position and the temperature controller should be turned anti-clockwise to minimal position, with power plug pulled out

3. The case when you will no longer use the oil-heater, please press the power

Continued

button to initialization Position, Turn the temperature Knob into the minimum position and take off the Plug.

Note: the heater operates via heat elimination of heat conduction oil, and the oil cools out slowly after the heater is turned off, so do not move the heater unless the oil has cooled out, and move the heater with the handle.

CLEANING AND MAINTENANCE

Cleaning

- Please disconnect power supply before cleaning.
- Wipe the outside of the heater with wet cloth at first, and then dry it with a piece of soft cloth.
- Does not use wax or any kind of polish, as these will react with the heater, leading to discoloration

Safety protection


- Do not cover the heater during operating; otherwise it will result in fire.
- The heater should be away from the wall or other flammable objects such as furniture, curtain, bed sheet or clothes at least 90cm.
- Do not disassemble radiation fin.
- Take care of your children when they are near or use the heater.
- Do not let power line contact damp or hot objects; do not wind or let child come near the power line.
- Do not use the heater in open air.
- Do not let the heater contact hot gasoline or electric burner.
- Do not use damaged wire or plug; do not use damaged heater unless it is repaired.
- Do not remove button parts of the heater.
- This heater is only suitable for use in the room.
- After dust removal, the oil left on the surface should be removed.

Continued

WARNINGS

- ❑ Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- ❑ Always use the heater in an upright position.
- ❑ Do not use the heater to dry your laundry. Never obstruct the intake and outlet grills (danger of overheating).
- ❑ The heater must be positioned at least 50cm from furniture or other objects.
- ❑ When the appliance must be installed so that the switches and other controls cannot be reached by persons using the bath tub or the shower.
- ❑ This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted only a technician authorized by the manufacturer, because such work requires special tools.
- ❑ The appliance must not be positioned directly underneath a fixed power point.
- ❑ Do not use the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- ❑ Do not use the appliance in rooms less than 4m² areas.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (e.g. obstruction of air intake and outlet grills, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

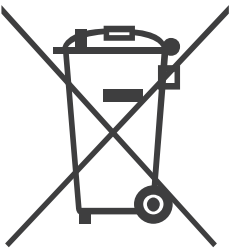

Environment friendly disposal

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Hotpoint

HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway
Exit 10-next to Kenyatta University
P.O Box 402-00606, Nairobi, Kenya
TEL: +254-20-3699000
info@hotpoint.co.ke

OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruiru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

VON[®]

DESIGNED TO LOVE

Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

VON HOME APPLIANCES WARRANTY

VON provides a 12 months warranty for this product from the date of purchase.

TERMS & CONDITIONS:

<p>1 The warranty is valid for 12 months from the date of purchase.</p> <p>2 This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p>3 Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p>4 All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightening /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p>5 This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p>6A This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p>6B This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p>6C This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p>	<p>7 Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p>8 This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p>9 No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p>10 In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p>11 Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p>12 Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p>13 The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p>14 This warranty shall be subject to the Laws of Kenya.</p>
---	--

YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.

PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.

THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY



WARRANTY CARD

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....
.....

ADDRESS:.....
.....

TEL/MOBILE NO.EMAIL ID.....

P.O. BOX:

DATE OF PURCHASE:/...../.....

DEALER'S NAME, BRANCH & ADDRESS:
.....

INVOICE NO.....

DEALERS STAMP:

A large, rounded rectangular box with a thin black border, intended for a dealer's stamp. It is positioned to the right of the text "DEALERS STAMP:".

Model No. VSHC2090K